

U *SER MANUAL*

E-Series

Sideshifter

Manual Number 218197-R4

cascade[®]
corporation

Cascade is a Registered Trademark of Cascade Corporation

	Page
INTRODUCTION	
Special Definitions	1
OPERATION	
Safety Rules	2
Industrial Lift Trucks	2
Handling Loads	3
Sideshifter Operation	3
Safe Operation and Maintenance	4
OSHA Regulations	4
INSTALLATION	
Truck Requirements	5
Recommended Hydraulic Supply	5
Installation Procedure	6
PERIODIC MAINTENANCE	
Daily	8
100-Hour Maintenance	8
300-Hour Maintenance	8
1000-Hour Maintenance	8
2000-Hour Maintenance	8
PARTS	
Product Identification	9
Recommended Spare Parts	9
Publications	9
Base Unit	10
Cylinder	11
Contacting Cascade	back cover

INTRODUCTION

This User Manual is for Cascade E-Series Sideshifters. It contains an Operation Guide, Installation Instructions, and a Parts Manual. All specifications are shown in U.S. and (Metric) units where applicable.

IMPORTANT: All hosing and flared fittings on E-Series attachments are JIC.



WARNING: Rated capacity of the truck/attachment combination is a responsibility of the original truck manufacturer and may be less than shown on the attachment nameplate. Consult the truck nameplate.

WARNING: Do not operate this attachment unless you are a trained and authorized lift truck driver.

Special Definitions

The statements shown appear throughout this Manual where special emphasis is required. Read all WARNINGS and CAUTIONS before proceeding with any work. Statements labeled IMPORTANT and NOTE are provided as additional information of special significance or to make your job easier.



WARNING - A statement preceded by WARNING is information that should be acted upon to prevent **bodily injury**. A **WARNING** is always inside a ruled box.

CAUTION - A statement preceded by CAUTION is information that should be acted upon to prevent machine damage.

IMPORTANT - A statement preceded by IMPORTANT is information that possesses special significance.


NOTE - A statement preceded by NOTE is information that is handy to know and may make your job easier.

OPERATION

This Section contains operating instructions for Cascade E-Series Sideshifters. It will help you avoid common errors which often cause damage to the equipment or product being handled.

This information is intended to simplify operator understanding about effective and safe Sideshifter use and operation. Read this information thoroughly before operating the Attachment. Be sure you know and understand all operating procedures and safety precautions. If you have any questions, or don't understand a procedure, ask your supervisor.

Emphasize Safety! Most accidents are caused by operator carelessness or misjudgment. You must watch for hazardous situations and correct them.

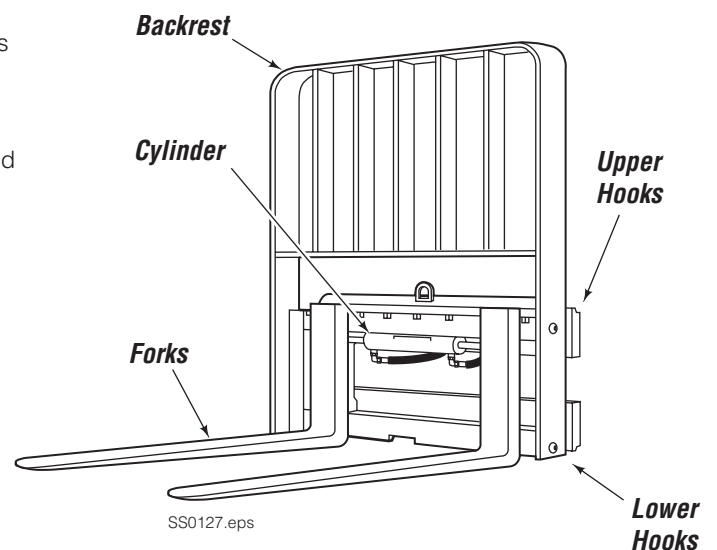

OPERATION

Safety Rules – Industrial Lift Trucks

No riders





No reaching through mast




No standing under load



GA0047.eps

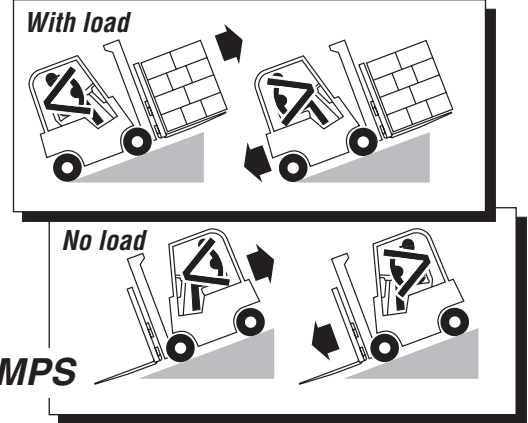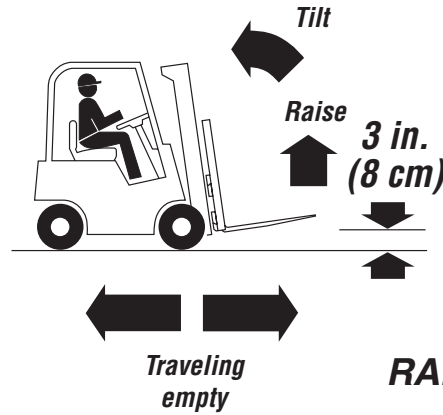


GA0048.eps

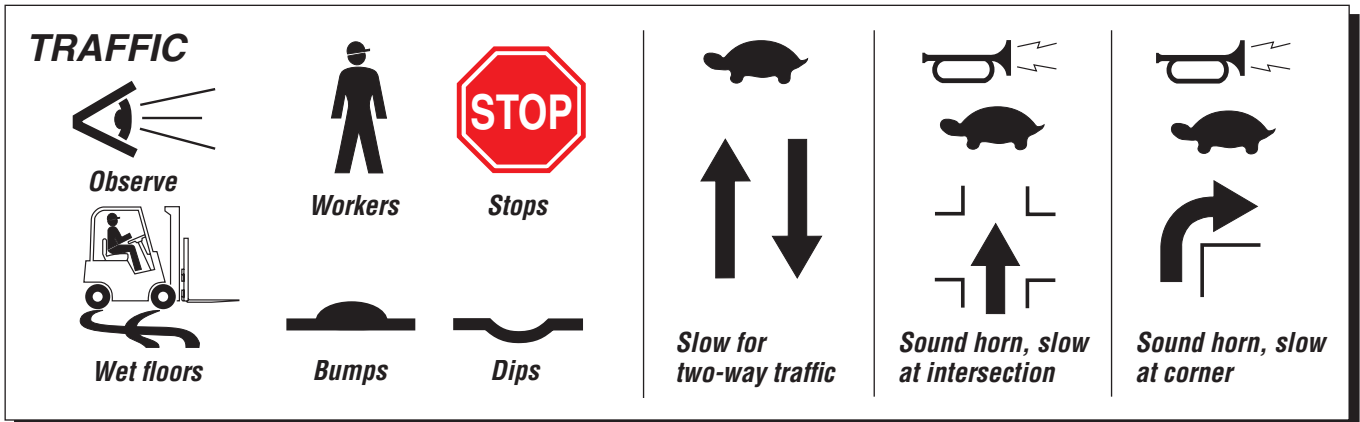


0

OPERATION

Safety Rules – Handling Loads

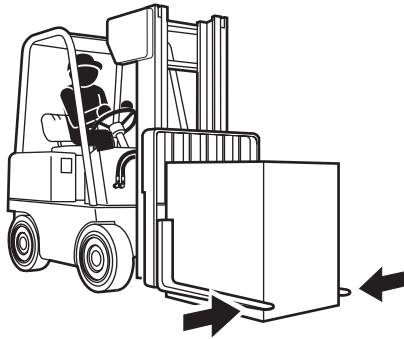


CAUTION: Do not put side loads on forks.

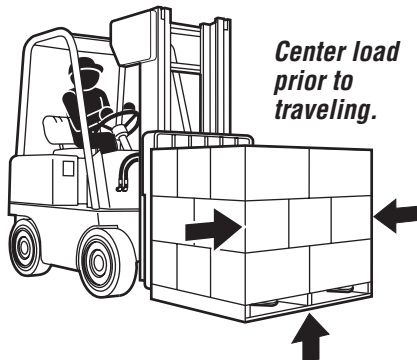


Center load prior to traveling.

Raise load prior to sideshifting.


Limit sideshifting with raised load.

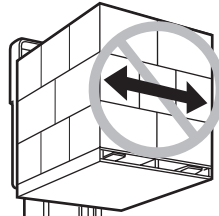

Limit truck movement with raised load.

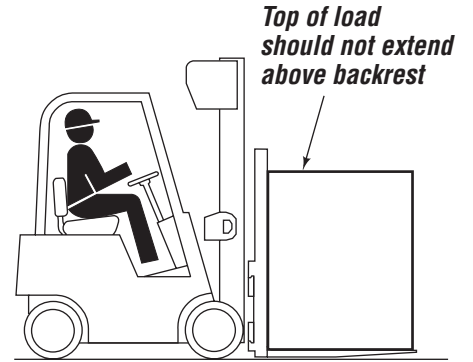

Top of load should not extend above backrest

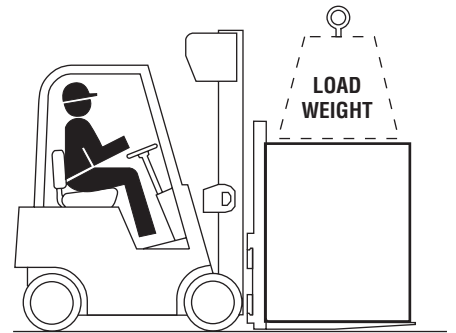


FP0017.eps

Load weight must not exceed combined truck/attachment capacity (see truck nameplate).

Total fork capacity (LH + RH fork) must be greater than load weight. Check capacity stamp on forks.

Sideshifter Operation


AUXILIARY VALVE FUNCTIONS

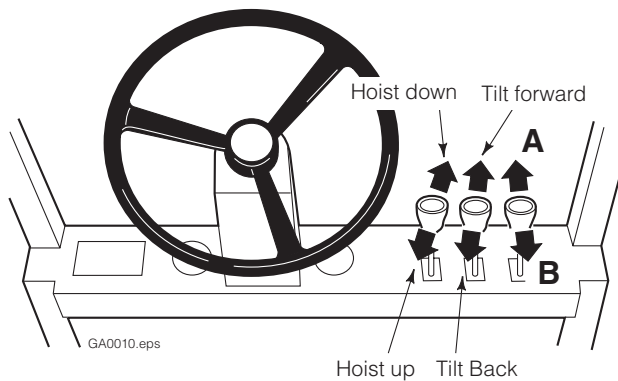

GA0010.eps

SIDESHIFTING

- A** Sideshift Left
- B** Sideshift Right

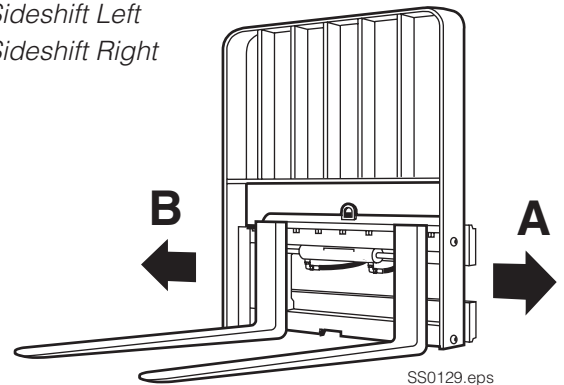

SS0129.eps



SAFE OPERATION AND MAINTENANCE

OSHA Regulations – Industrial Trucks and Attachments (Specific Regulations from OSHA 1910.178)



WARNING: The safe operation and maintenance of industrial trucks is regulated by Occupational Safety and Health (OSHA) regulations 1910.178 and American National Standards Institute (ANSI) Safety Standard for Powered Industrial Trucks, ANSI B56.1. When operating and maintaining industrial trucks equipped with attachments you should pay particular attention to the following sections of these regulations. You should be familiar with **all** sections of these regulations. **Ask your employer for the complete regulations.**

(a) General Requirement

- (4) Modifications and additions which affect capacity and safe operation shall not be performed by the customer or user without manufacturers prior written approval. Capacity, operation and maintenance instruction plates, tags or decals shall be changed accordingly.
- (5) If the truck is equipped with front-end attachments other than factory installed attachments, the user shall request that the truck be marked to identify the attachments and show the appropriate weight of the truck and attachment combination at maximum elevation with load laterally centered.
- (6) The user shall see that all nameplates and markings are in place and maintained in a legible condition.

(e) Safety Guards

- (2) If the type of load presents a hazard, the user shall equip fork trucks with a vertical load backrest extension in accordance with (a)(2) following.
 - (a)(2) All new powered industrial trucks acquired and used by an employer after February 15, 1972 shall meet the design and construction requirements for powered industrial trucks established in the "American National Standard for Powered Industrial Trucks, Part II, ANSI B56.1", except for vehicles intended primarily for earth moving or over-the-road hauling.

(l) Operator Training

Only trained and authorized operators shall be permitted to operate a powered industrial truck. Methods shall be devised to train operators in the safe operation of powered industrial trucks.

(m) Truck Operations

- (1) Trucks shall not be driven up to anyone standing in front of a bench or other fixed object.
- (2) No person shall be allowed to stand or pass under the elevated portion of any truck, whether loaded or empty.
- (3) Unauthorized personnel shall not be permitted to ride on powered industrial trucks. A safe place to ride shall be provided where riding of trucks is authorized.
- (4) The employer shall prohibit arms or legs from being placed between the uprights of the mast or outside the running lines of the truck.
- (5i) When a powered industrial truck is left unattended, load engaging means shall be fully lowered, controls shall be neutralized, power shall be shut off and brakes set. Wheels shall be blocked if the truck is parked on an incline.
- (5ii) A powered industrial truck is unattended when the operator is 25 feet or more away from the vehicle which remains in his view, or whenever the operator leaves the vehicle and it is not in his view.
- (5iii) When the operator of an industrial truck is dismounted and within 25 feet of the truck still in his view, the load engaging means shall be fully lowered, controls neutralized and the brakes set to prevent movement.
- (6) A safe distance shall be maintained from the edge of ramps or platforms while on any elevated dock or platform or freight car. Trucks shall not be used for opening or closing freight doors.

- (10) A load backrest extension shall be used whenever necessary to minimize the possibility of the load or part of it from falling rearward.

(n) Traveling

- (4) The driver shall be required to slow down and sound the horn at cross isles and other locations where vision is obstructed. If the load being carried obstructs forward view, the driver shall be required to travel with the load trailing.
- (7i) When ascending or descending grades in excess of 10 percent, loaded trucks shall be driven with the load upgrade.
- (7iii) On all grades the load and load engaging means shall be tilted back if applicable, and raised only as far as necessary to clear the road surface.

(o) Loading

- (1) Only stable or safely arranged loads shall be handled. Caution shall be exercised when handling off-center loads which cannot be centered.
- (2) Only loads within the rated capacity of the truck shall be handled.
- (3) The long or high (including multiple-tiered) loads which may affect capacity shall be adjusted.
- (4) Trucks equipped with attachments shall be operated as partially loaded trucks when not handling a load.
- (5) A load engaging means shall be placed under the load as far as possible; the mast shall be carefully tilted backward to stabilize the load.
- (6) Extreme care shall be used when tilting the load forward or backward, particularly when high tiering. Tilting forward with load engaging means elevated shall be prohibited except to pick up a load. An elevated load shall not be tilted forward except when the load is in a deposit position over a rack or stack. When stacking or tiering, only enough backward tilt to stabilize the load shall be used.

(p) Operation of the Truck

- (1) If at any time a powered industrial truck is found to be in need of repair, defective, or in any way unsafe, the truck shall be taken out of service until it has been restored to safe operating condition.

(q) Maintenance of Industrial Trucks

- (1) Any power-operated industrial truck not in safe operating condition shall be removed from service. All repairs shall be made by authorized personnel.
- (5) All parts of any such industrial truck requiring replacement shall be replaced only by parts equivalent as to safety with those used in the original design.
- (6) Industrial trucks shall not be altered so that the relative positions of the various parts are different from what they were when originally received from the manufacturer, nor shall they be altered either by the addition of extra parts not provided by the manufacturer or by the elimination of any parts. Additional counter-weighting of fork trucks shall not be done unless approved by the truck manufacturer.
- (7) Industrial trucks shall be examined before being placed in service and shall not be placed in service if the examination shows any condition adversely affecting the safety of the vehicle. Such examinations shall be made at least daily. When industrial trucks are used on a round-the-clock basis, they shall be examined after each shift. Defects when found shall be immediately reported and corrected.

Truck Requirements

Truck Relief Setting

2000 psi (140 bar) Recommended
3500 psi (240 bar) Maximum


Truck Flow Volume ^①

	Min. ^②	Recommended	Max. ^③
55E, 60E	1 GPM (4 L/min.)	2 GPM (7.5 L/min.)	3 GPM (12 L/min.)
100E	1 GPM (4 L/min.)	4 GPM (15 L/min.)	5 GPM (19 L/min.)

① Cascade E-Series Sideshifters are compatible with SAE 10W petroleum base hydraulic fluid meeting Mil. Spec. MIL-0-5606 or MIL-0-2104B. Use of synthetic or aqueous base hydraulic fluid is not recommended. If fire resistant hydraulic fluid is required, special seals must be used. Contact Cascade.

② Flow less than recommended will result in slow sideshift speed.

③ Flow greater than maximum can result in excessive heating, reduced system performance and short hydraulic system life.

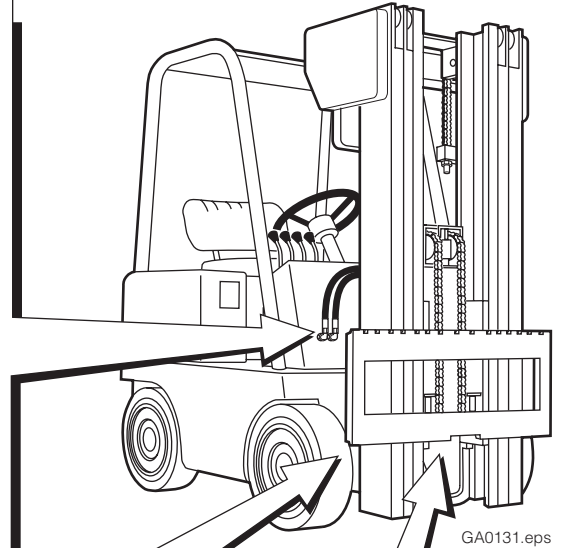

GA0131.eps

Carriage Mount Dimension (A) ITA (ISO)




GA0028.eps

	Minimum	Maximum
Class II	14.94 in. (380.0 mm)	15.00 in. (381.0 mm)
Class III	18.68 in. (474.5 mm)	18.74 in. (476.0 mm)

Carriage – Clean and inspect carriage bars. Verify that bars are parallel and ends are flush. Grind smooth any protruding welds that may affect attachment lower bearings. Repair any damaged notches.

Recommended Hydraulic Supply


The attachment will require one of the hydraulic supply arrangements shown below. All hoses and fittings should be at least No. 4 with 3/16 in. (5 mm) minimum I.D. Refer to Cascade *Hose & Cable Reel Selection Guide*, Part No. 212199 to select the correct hose reel for the mast and truck.

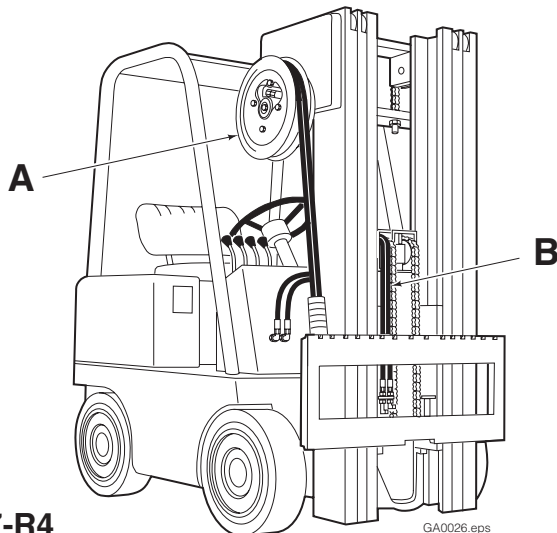

GA0026.eps

Auxiliary Valve Functions

Check for compliance with ITS (ISO) standards:

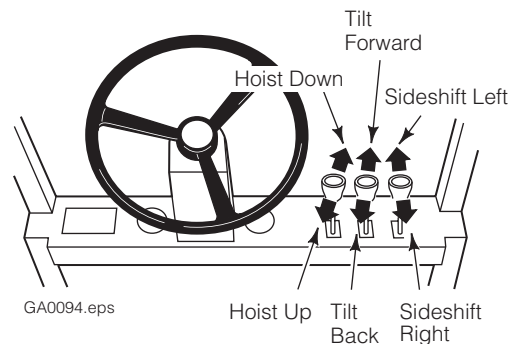


GA0094.eps

- A** RH THINLINE™ 2-Port Hose Reel Supply Group
OR
B Mast Single Internal Hose Reaving


Installation Procedure

1 Attach overhead hoist

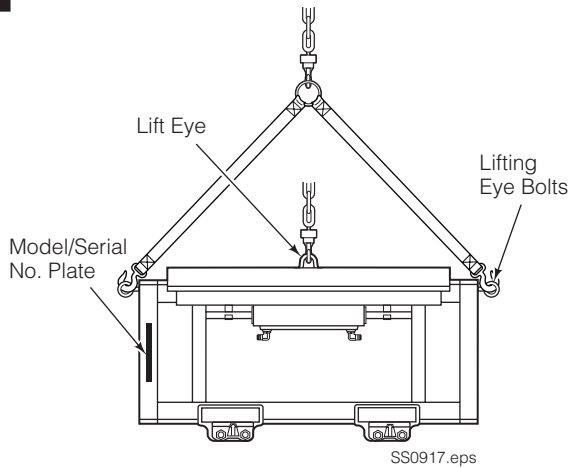


WARNING: Check the attachment weight (located on nameplate) to make sure the overhead hoist is at least the rated capacity of the attachment.

2 Remove lower hooks

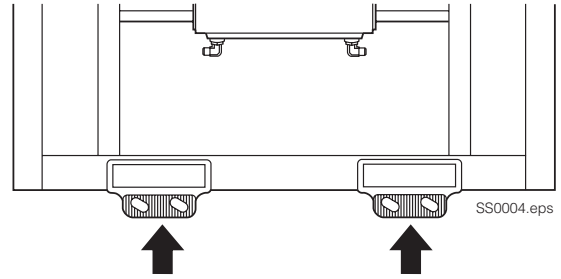


3 Mount Sidsifter on truck carriage


ITA Class II – .60-.66 in. (15-17 mm)
ITA Class III – .72-.78 in. (18-20 mm)

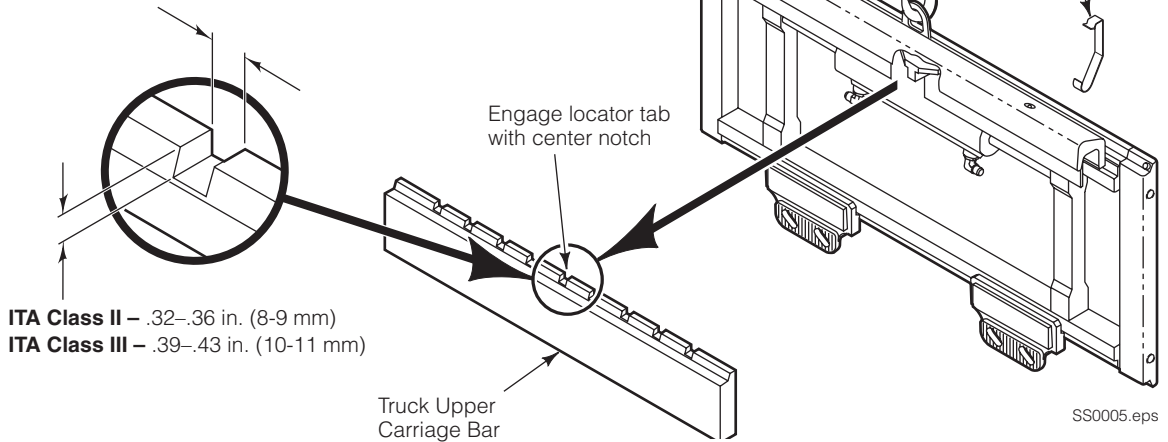

4 Install lower hooks

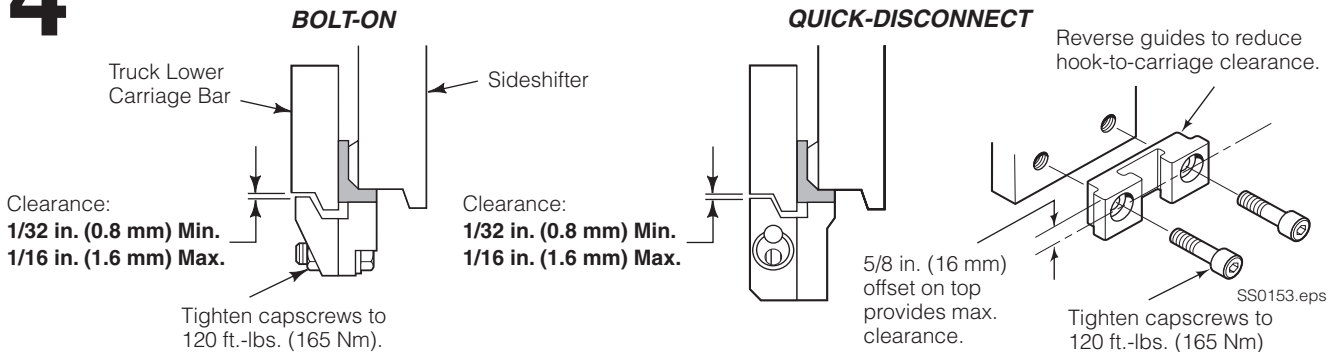


5 Flush supply hoses

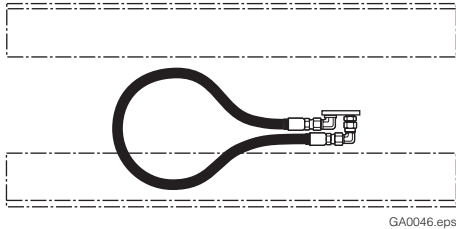


6 Install hoses

Optional Installation Kit 205826 shown for internal reeving.

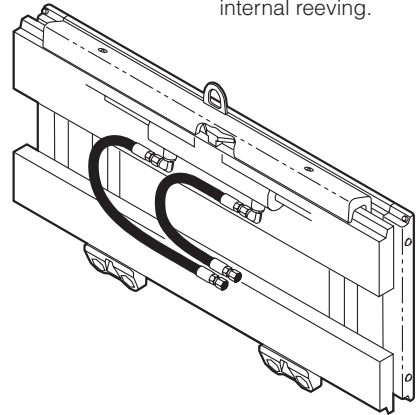


7 Install forks

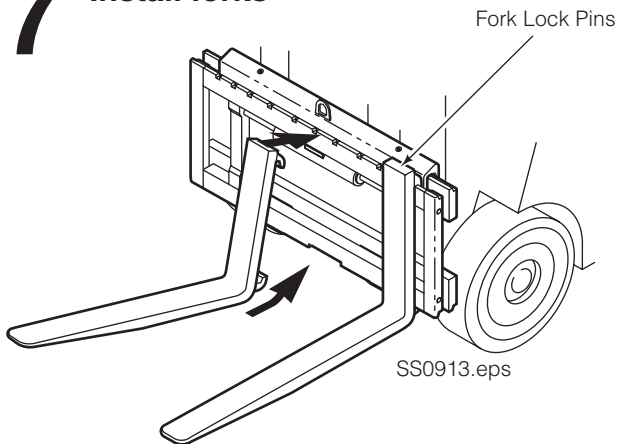

WARNING: If the fork locking pin is not fully engaged, the fork could become disengaged from the carriage.


8 Install backrest

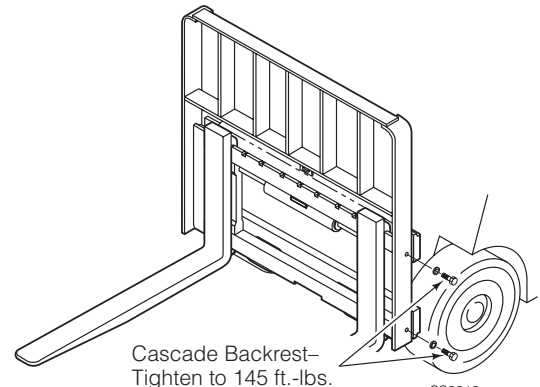

9 Lubricate lower bearings

Lubricate the sideshifter lower bearings with chassis grease.

IMPORTANT: Upper bearings are prelubed at the factory with break-in grease. No lubrication required for installation.

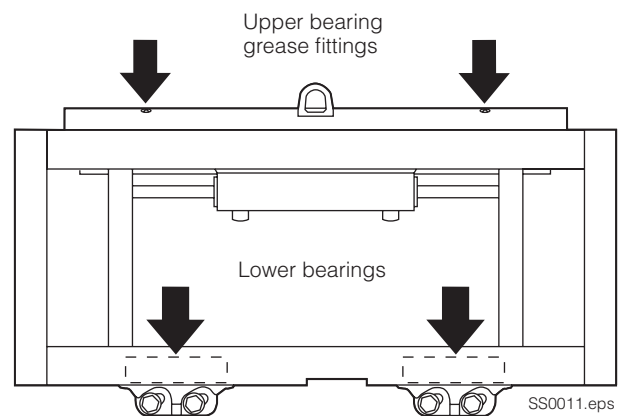



WARNING: After completing any service procedure, always test the sideshifter through five complete cycles. First test with no load, then test with a load to make sure the attachment operates correctly before returning it to the job.

Daily

Check items shown each day. Report problems to your supervisor. Refer to attachment service manual for maintenance and repair procedures.



WARNING: If the fork locking pin is not fully engaged, the fork could become disengaged from the carriage.

100-Hour

Every time the lift truck is serviced or every 100 hours of truck operation, whichever comes first, complete the following maintenance procedures:

- Check for loose or missing bolts, worn or damaged hoses, hydraulic leaks and damaged or missing fork stops.
- Inspect lower hooks for wear and proper clearance. Adjust if necessary, referring to Installation, step 4. Tighten lower hook capscrews to 120 ft.-lbs. (165 Nm).

500-Hour


After each 500 hours of truck operation, in addition to the 100-hour maintenance, perform the following procedures:

- Tighten backrest (Cascade) capscrews to 115-125 ft.-lbs. (155-170 Nm).
- Apply general-purpose chassis grease to lower bearing surfaces and upper bearing grease fittings.

1000-Hour

After each 1000 hours of truck operation, in addition to the 100 and 500-hour maintenance, perform the following procedures:

- Inspect upper and lower bearings for wear. If any bearing is worn to less than 1/16 in. (1.5 mm) thick, replace the entire bearing set. Refer to the attachment service manual for replacement procedure.

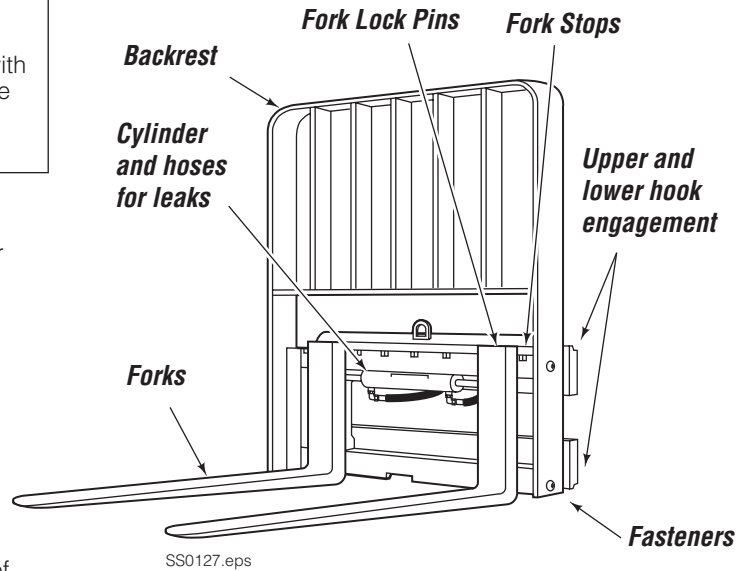

SS0127.eps

2000-Hour

After 2000 hours of truck operation, in addition to the 100, 500 and 1000-hour maintenance, forks in use shall be inspected at intervals of not more than 12 months (for single shift operations) or whenever any defect or permanent deformation is detected. Severe applications will require more frequent inspection.


Fork inspection shall be carried out by trained personnel to detect any damage that might impair safe use. Any fork that is defective shall be removed from service. Reference ANSI B56.1-2005.

Inspect for the following defects:


- Surface cracks
- Straightness of blade and shank
- Fork angle
- Difference in height of fork tips
- Positioning lock
- Wear on fork blade and shank
- Wear on fork hooks
- Legibility of marking

NOTE: Fork Safety Kit 3014162 contains wear calipers, inspection sheets and safety poster. Also available is fork hook & carriage wear gauge 209560 (Class II) and 209561 (Class III).

Product Identification – This Section shows replacement parts for E-Series Sideshifters. The product serial number is located on the namplate on the back surface of the left vertical bar (driver's view) and must be provided when ordering replacement parts.



WARNING: For the safety of yourself and others, DO NOT install the parts shown in this manual unless you have thoroughly reviewed the appropriate Service Manual.

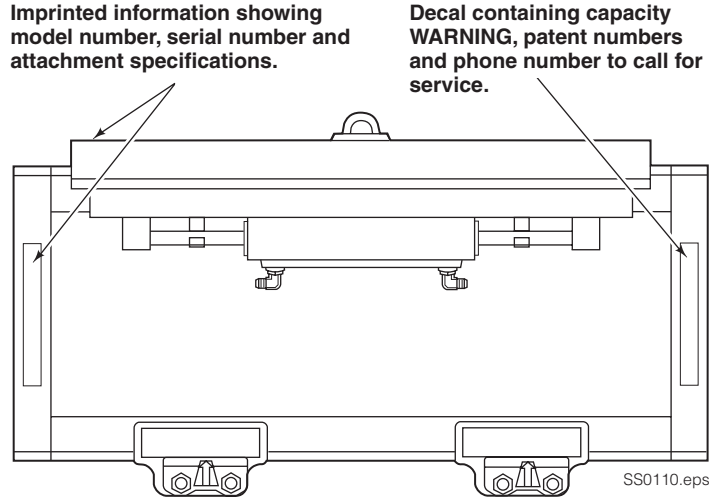


Recommended Spare Parts



55E PART NO.	65E PART NO.	100E PART NO.	DESCRIPTION	UNITS SERVICED		
				1-5 QTY.	6-19 QTY.	20-50 QTY.
204187	672018	672018	Upper Bearing	8	16	32
■	208350	208350	Lower Bearing	6	12	24
204186	204186	204186	Lower Hook	0	2	4
639121	639121	639121	Capscrew, 5/8 X 1.5	0	4	8
553857	553857	553857	Nut, 5/8	0	4	8
667225	667225	667225	Washer	0	4	8
■	■	■	Cylinder Assembly	0	0	1
563487	563487	564409	Cylinder Service Kit	1	2	4
562055	562055	564401	Rod	0	0	1

■ See specific parts page for part number.

Publications

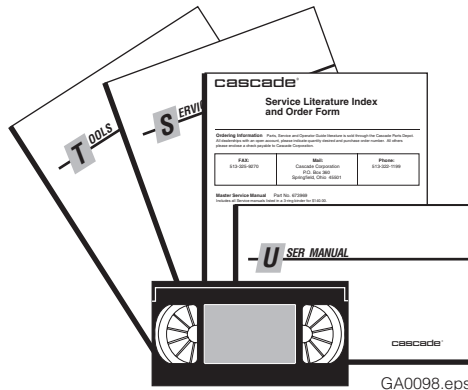


PART NO.	DESCRIPTION
218197	User Manual (Operation & Installation)
205849	Service Manual
679929	Tool Catalog
673964	Literature Index Order Form

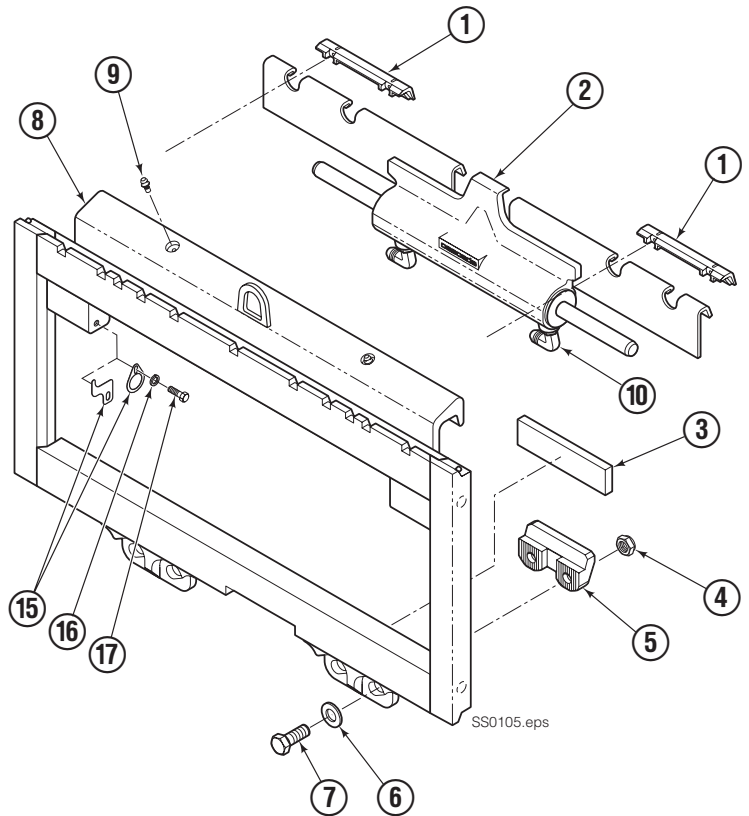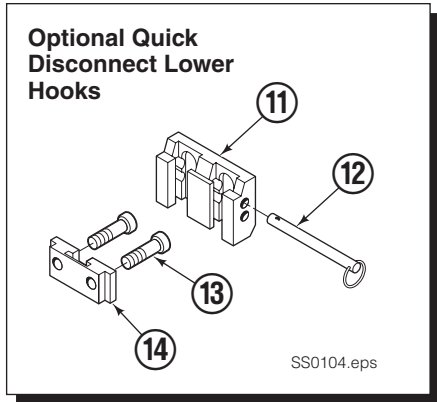

REF	QTY	55E PART NO.	60E/100E PART NO.	DESCRIPTION
1	▼	204187	672018	Upper Bearing, Composite
	▼	204137	804065	Upper Bearing, Bronze
2	1	■	■	Cylinder/Anchor Assembly
3	▼	–	208350	Lower Bearing
	▼	208387	–	Lower Bearing, 12 mm ◆
	▼	204188	–	Lower Bearing, 15 mm ◆
	▼	207209	–	Lower Bearing, 19 mm ◆
4	4	553857	553857	Nut, 5/8 UNC, G5 ★
5	2	204186	204186	Lower Hook ★
	2	228166	228166	Lower Hook, Bronze (Optional)
6	4	667225	667225	Washer ★
7	4	639121	639121	Capscrew, 5/8 UNC X 1.50, G5 ★
8	1	●	●	Frame
9	▼	7403	7403	Grease Fitting
10	2	601676	601676	Fitting, JIC 6-6
	2	667222	667222	Fitting, JIC 5-6
	2	666984	666984	Fitting, JIC 4-6
	2	211807	211807	Fitting, Face Seal Adpt 4-6
11	2	675514	675957	QD Hook
12	2	678832	678832	Pin, QD
13	4	683182	779019	Cap screw
14	2	675515	675958	Guide
15	2	205857	208355	Retainer
16	2	680253	202346	Washer
17	2	765329	763169	Capscrew

- ◆ **NOTE:** Sideshifter serial numbers 55E-SS-001 through 147, use 12 mm thick lower bearings or optional 15 mm thick bearings. Serial numbers 55E-SS-148 and higher, use 19 mm thick lower bearings.
- If frame needs replacing, order complete sideshift assembly.
- ★ Included in Lower Hook Service Kit 204182.
- See Cylinder page for parts breakdown.
- ▼ Quantity as required.

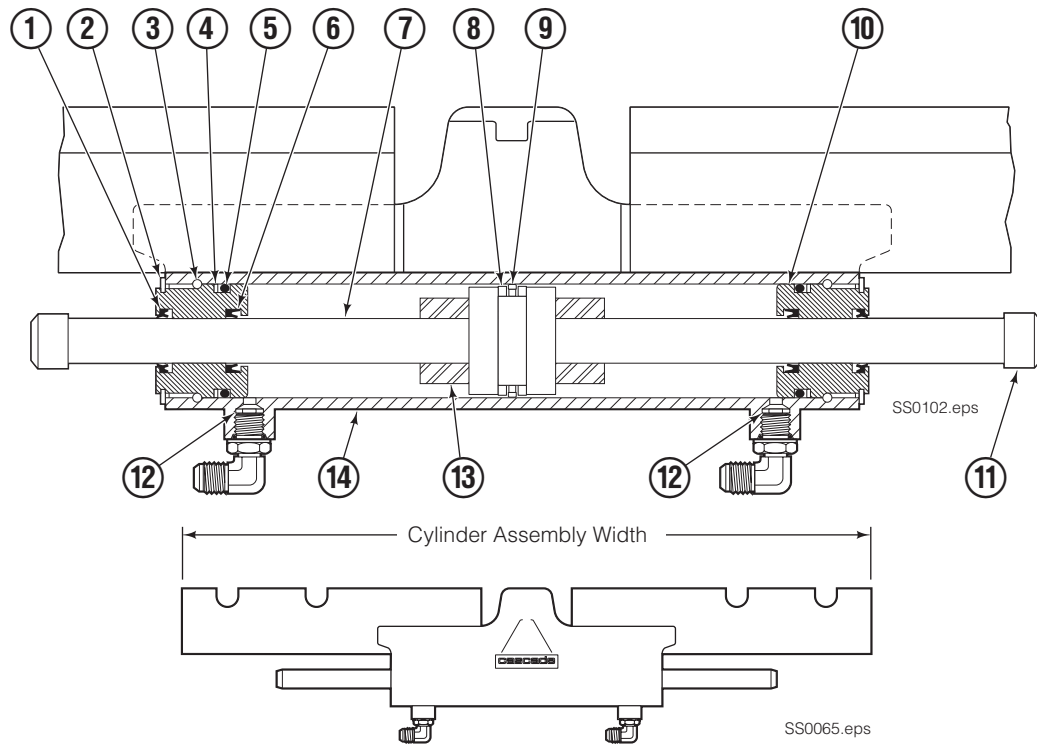

REF	QTY	55E PART NO.	60E PART NO.	100E PART NO.	DESCRIPTION
		205848	-	-	Cylinder Assembly, 24.4 in. (620 mm) wide
		205840	-	-	Cylinder Assembly, 26.2 in. (665 mm) wide
		205841	-	-	Cylinder Assembly, 28.9 in. (735 mm) wide
		205842	-	-	Cylinder Assembly, 31.9 in. (810 mm) wide
		-	583970	-	Cylinder Assembly, 34.1 in. (865 mm) wide
		205845	-	-	Cylinder Assembly, 35.2 in. (895 mm) wide
		-	583971	584001	Cylinder Assembly, 36.0 in. (915 mm) wide
		205847	-	-	Cylinder Assembly, 38.3 in. (975 mm) wide
		-	583972	584002	Cylinder Assembly, 40.2 in. (1020 mm) wide
		205843	-	-	Cylinder Assembly, 41.0 in. (1040 mm) wide
		205846	-	-	Cylinder Assembly, 45.1 in. (1145 mm) wide
		-	583973	-	Cylinder Assembly, 48.0 in. (1220 mm) wide
		-	-	584003	Cylinder Assembly, 48.1 in. (1220 mm) wide
		206370	-	-	Cylinder Assembly, 48.8 in. (1240 mm) wide
		205844	-	-	Cylinder Assembly, 52.0 in. (1320 mm) wide
		-	-	584004	Cylinder Assembly, 55.2 in. (1400 mm) wide
1	2	562131	562131	564408	Wiper Seal ●
2	2	562951	562951	3154	Snap Ring
3	2	562942	562942	564403	Retaining Ring
4	2	-	-	615131	Back-Up Ring ●
5	2	218228	218228	2789	O-Ring ●
6	2	562132	562132	564406	Rod Seal ●
7	1	562055	562055	564401	Rod/Piston Assembly
8	2	563278	563278	564404	Bearing Ring ●
9	1	564141	564141	564407	Piston Seal ●
10	2	562792	562792	564402	Retainer
11	2	208378	208378	-	Rod End Cap ●
12	2	564226	564226	564226	Speed Control Washer
13	2	-	-	-	Spacer
14	-	■	■	■	Cylinder Shell
		563487	563487	564409	Service Kit

● Included in Service Kits 563487 (55E & 60E) and 564409 (100E).

■ Not serviceable, order new cylinder assembly.

Reference: S-3816, S-4019, S-4060, S-6105

Do you have questions you need answered right now? Call your nearest Cascade Service Department. Visit us online at www.cascorp.com

AMERICAS

**Cascade Corporation
U.S. Headquarters**
2201 NE 201st
Fairview, OR 97024-9718
Tel: 800-CASCADE (227-2233)
Fax: 888-329-8207

Cascade Canada Inc.
5570 Timberlea Blvd.
Mississauga, Ontario
Canada L4W-4M6
Tel: 905-629-7777
Fax: 905-629-7785

Cascade do Brasil
Rua João Guerra, 134
Macuco, Santos - SP
Brasil 11015-130
Tel: 55-13-2105-8800
Fax: 55-13-2105-8899

EUROPE-AFRICA

**Cascade Italia S.R.L.
European Headquarters**
Via Dell'Artigianato 1
37030 Vago di Lavagno (VR)
Italy
Tel: 39-045-8989111
Fax: 39-045-8989160

Cascade (Africa) Pty. Ltd.
PO Box 625, Isando 1600
60A Steel Road
Sparton, Kempton Park
South Africa
Tel: 27-11-975-9240
Fax: 27-11-394-1147

ASIA-PACIFIC

Cascade Japan Ltd.
2-23, 2-Chome,
Kukuchi Nishimachi
Amagasaki, Hyogo
Japan, 661-0978
Tel: 81-6-6420-9771
Fax: 81-6-6420-9777

Cascade Korea
121B 9L Namdong Ind.
Complex, 691-8 Gojan-Dong
Namdong-Ku
Inchon, Korea
Tel: +82-32-821-2051
Fax: +82-32-821-2055

Cascade-Xiamen
No. 668 Yangguang Rd.
Xinyang Industrial Zone
Haicang, Xiamen City
Fujian Province
P.R. China 361026
Tel: 86-592-651-2500
Fax: 86-592-651-2571

**Cascade India Material
Handling Private Limited**
No 34, Global Trade Centre
1/1 Rambaugh Colony
Lal Bahadur Shastri Road,
Navi Peth, Pune 411 030
(Maharashtra) India
Phone: +91 020 2432 5490
Fax: +91 020 2433 0881

Cascade Australia Pty. Ltd.
1445 Ipswich Road
Rocklea, QLD 4107
Australia
Tel: 1-800-227-223
Fax: +61 7 3373-7333

Cascade New Zealand
15 Ra Ora Drive
East Tamaki, Auckland
New Zealand
Tel: +64-9-273-9136
Fax: +64-9-273-9137

**Sunstream Industries
Pte. Ltd.**
18 Tuas South Street 5
Singapore 637796
Tel: +65-6795-7555
Fax: +65-6863-1368

